

FOR INSTALLATION ON DRIVER'S SIDE ONLY



Before returning this product to the store of purchase

Contact Dee Zee if you experience the following problems:

- Missing Parts
- Installation Problems/Questions
- Warranty Questions

1.800.779.2102


Hours of operation: 8am - 5pm CST, Mon-Friday

Review complete warranty policy and register your product at:
www.deeze.com

DZ 43200
TAILGATE ASSIST
FORD F-150 2004-2011



BALL MOUNT PLATE

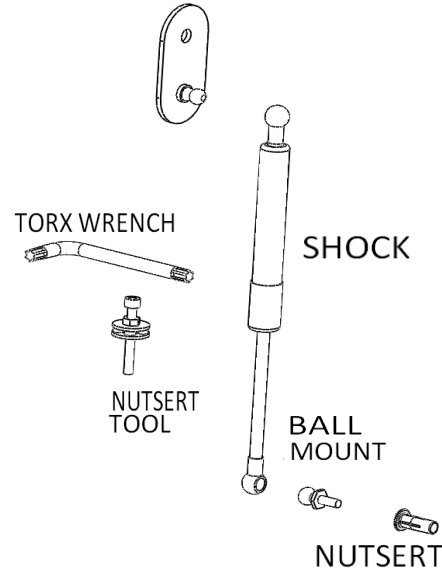

PARTS LIST:

ITEM	QTY
THREAD LOCK TUBE	1
SHOCK	1
BALL MOUNT PLATE	1
NUTSERT TOOL	1
BALL MOUNT	1
NUTSERT	1
TORX WRENCH	1

TOOLS REQUIRED:

- T-50 TORX
- M5 ALLEN WRENCH
- TAPE MEASURE
- 10MM WRENCH
- 13MM WRENCH/SOCKET

NOTE: THIS PRODUCT CAN ONLY BE INSTALLED ON THE DRIVER'S SIDE.


STEP 1)

Adjust the nutsert tool so there is 3/4" from the washer to the head of the bolt.



STEP 2)

Using a M5 Allen wrench and a 10mm wrench, install the nutsert in the opening by the tailgate pivot point.

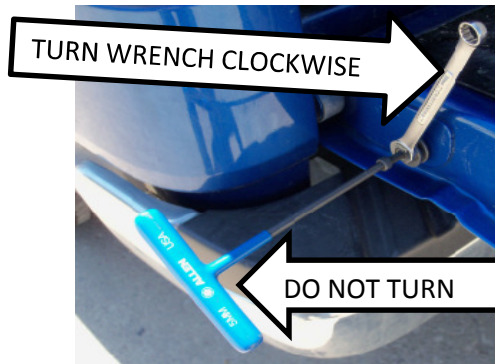

The nutsert should be tightened 9 360 degree turns.

Mark one side of the nut and count the number of revolutions to insure the correct number of full turns. Overtightening the nutsert can strip the threads and cause the nutsert to be unusable. Remove the nutsert tool when installation is complete.



STEP 3)


Apply thread lock to the threads of the ball mount. Install the ball mount into the nutsert using a 13mm wrench/socket. Torque to 8 ft-lbs with 13mm socket.



FOR INSTALLATION ON DRIVER'S SIDE ONLY

STEP 4)

Use a T50 torx socket or the wrench provided to remove the cable bolt. Remove the tailgate cable from the bolt.

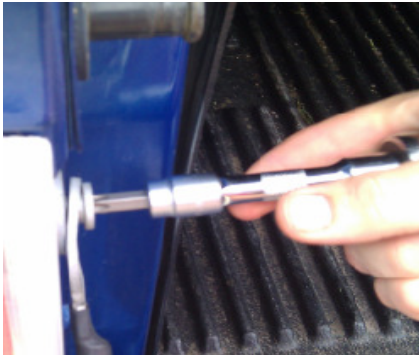

STEP 5)

Install the bolt removed from the previous step through the hole in the ball mount plate back into the hole.



Tighten the bolt with the T50.

STEP 6)

Install the cable back onto the cable bolt, and the larger part of the shock on the ball mount.



STEP 7)

Install the narrow end of the shock on the ball mount previously installed.

